



Permissions For Reprints Contact: 1-800-640-8285

How To Install A Floor Mounted Door Stop

Here is still another door stopper solution! This one looks quite snazzy, though it functions for precisely the same purpose as those we've already mentioned. Once again, dear reader, the choice is yours.

Utensils

Pencil
Ruler
Hammer
Awl
Screwdriver Hand or electric drill
Carbide bit to fit lead shield (for concrete floors only)

Ingredients

Floor bumper (Fig. 33A)
Fiber anchor to fit bumper screw

Approximate Time: 15 To 30 Minutes

1. Swing door to where you would like it stopped.
2. With pencil, mark that spot on the floor on hinge side and edge of door. See Figure 33B.
3. Measure 2" inches from the edge of door toward hinge on the hinge side of door.
4. From that spot, measure 1" inch away from door in door's swing path, as shown in Figure 33B.
5. Punch hole into floor at this spot with awl.
6. Screw door stopper to floor with wood screws (Fig. 33C).
7. If floor is concrete:
 - a. Drill hole and insert fiber anchor.
 - b. Screw bumper into floor. Rubber tip should face door.

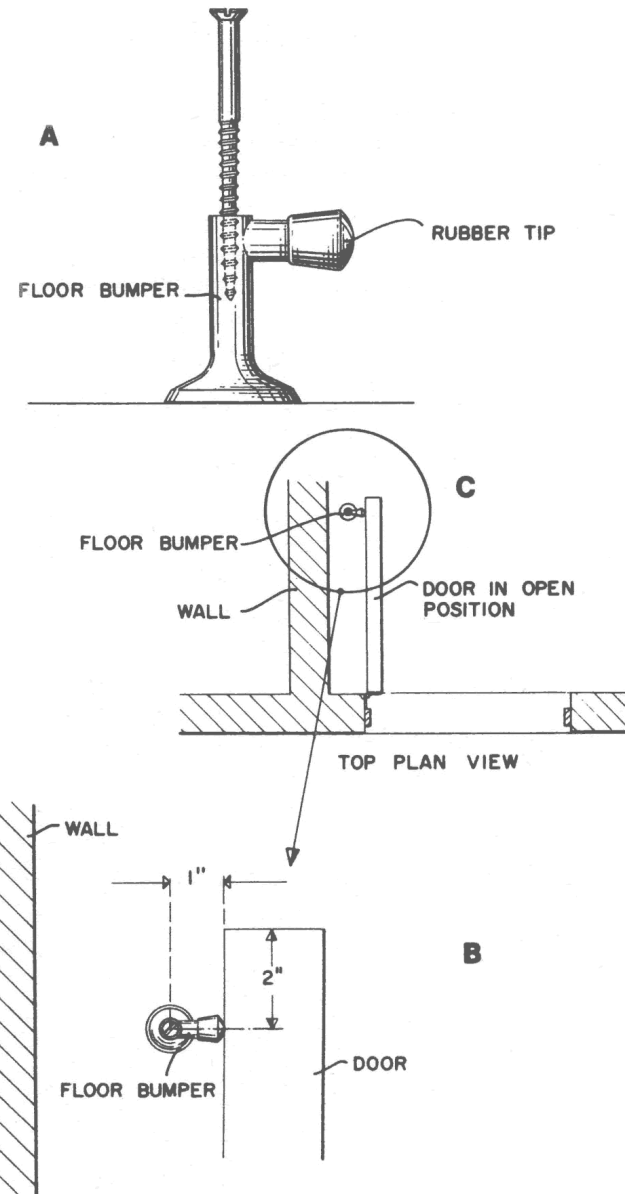


Figure 33.
Floor Bumper Setup